



## RAYNOX Camcorder Cross Reference Table for Fisheye Lens

2010/2/5  
www.raynox.com

Camera Maker	Camera Model	HD-FXR180 (Diagonal)	DCR-CF187PRO(Circular)	DCR-FE181PRO(Diagonal)	XL-3000PRO(0.3x)	MX-3062PRO(0.3x)	MX-3000PRO(0.3x)	HD-3035PRO(0.3x)
SONY	HDR-FX1000(E), HVR-Z5(E)(U)		RA6272*11					
	HDR-FX7(E), HVR-V1(E)(N)(U)		Direct mount*9	Direct mount*10	Direct mount	Direct mount		
	HDR-CX7(E)(EK)(K)(KE)/CX6EK							Direct mount
	HDR-UX20							RA3730(Included)
	HDR-UX1							RA3730(Included) *1
	HDR-SR12(E)/SR11(E)/CX12(E)							Direct mount
	HDR-SR8(E),HDR-SR7(E)							Direct mount
	HDR-SR1							RA3730(Included) *1
	HDR-HC3							RA3730(Included) *1
	HVR-Z7(E)/S270(E)							
	HDR-FX1/HVR-Z1(U)(E)	Direct mount						
	HDR-HC9(E)/HC7(E)/CX7(UX7(E)/HC5(E)/UX5(E)							Direct mount
	HDR-HC1, HVR-A1		RA6252(Included)+RA5237A*8	RA6252(Included)+RA5237A*7				Direct mount
	HDR-CX110/150/155E/116E/115E, HDR-XR150/155E							RA3730(Included)
	HDR-XR100(E)/105(E)/CX100(E)/105(E)							RA3730(Included)
	HDR-XR500V(E)/520V(E), CX500V(E)/520V(E)							Direct mount
	DCR-DVR508/DCR-DVD908(E)							Direct mount
	DCR-DVD405/403/505							RA3730(Included)
	DCR-DVD308/DCR-DVD708(E)							RA3730(Included)
	DCR-SR300(C)(E)							Direct mount
	DCR-SR62(E)							RA3730(Included)
	DCR-SR100/SR60							RA3730(Included)
	DCR-HC62(E)/DVD810							RA3730(Included)
	DCR-HC96/90							RA3730(Included)
	DCR-HC48							RA3730(Included)
DCR-VX2100/2000/PD-170/PD-150/DSR-250				RA6258(Included)	Direct mount		Direct mount	
DCR-VX1000					Direct mount			
DCR-TRV950/PDX10				RA6252(Included)+RA5237A	RA5237A		Direct mount	
PMW-EX1(E)								
Canon	HF11/10/100/HG21							Direct mount
	HF20/21							Direct mount
	HF S10/11/100						Direct mount	
	XH-G1, XH-A1			RA6272				
	XL1/XL2/XL H1 16X-20X Zoom							
	HV30/HV20/HG10							
	HV10							Direct mount
	HR10							Direct mount
	DM-DC40					RA5237A		Direct mount
	DM-DC20							RA3727P5(Included)
	DM-FV500(ZR 100/MV 790/800/800i)							RA3728P5
	IXY DV M5(Optura 600A/MVX iE)							RA3734P5(Included)
	IXY DV S1(Optura S1/MVX1Si)							RA3727P5(Included)
	IXY DV5(EIura 50/MV 6IMC)/DV3(EIura 40MC/MV5IMC)							RA3728P5
	FV M300(EIura 100/MVX 430/450/460)							RA3727P5(Included)
	FV M1(Optura Xi/MVX3i)					RA5246		
	XV-1(GL1/XM1)/XV-2(GL2/XM2)				RA6258(Included)	Direct mount		Direct mount
	PV130					RA5243A		

\*1:Vignetting occurs at 4:3 Still mode \*2:Vignetting occurs at Still/Video/under scanning mode \*3:Remove camera's cosmetic ring or hood before attaching the Raynox lens \*4:Vignetting occurs at Still/16:9 Video mode when used with QC-303 \*5:Vignetting occurs at Still mode \*6:Slight vignetting occurs at under scanning/still mode \*7:Unable to take a full diagonal fisheye image \*8:Unable to take circular fisheye image other than at 4:3 Still mode \*9:may not produce either circular or diagonal fish-eye image \*10:Slight vignetting may occur in (under scanning) mode and still image mode in maximum wideangle zooming. \*11:A Circular Fisheye image can be captured at still mode in under-scanning system(PC monitor).

Remote control function and internal video light/Flash may not work properly with conversion lens attached.



# RAYNOX Camcorder Cross Reference Table for Fisheye Lens

2010/2/5  
www.raynox.com

Camera Maker	Camera Model	HD-FXR180 (Diagonal)	DCR-CF187PRO(Circular)	DCR-FE181PRO(Diagonal)	XL-3000PRO(0.3x)	MX-3062PRO(0.3x)	MX-3000PRO(0.3x)	HD-3035PRO(0.3x)	
Panasonic	HDC-SD1/DX3, AG-HSC1U							RA3743(Included)*6	
	HDC-SD9/HS9/SD5/SD5EG/SX5							Direct mount*3	
	HDC-SD100/HS100							Direct mount*3	
	HDC-TM30							RA37305P5(Included)	
	HDC-HS300/350/200, TM300/350/SD200							RA3743(Included) *3	
	AG-HMC150/151/155, AG-HPX170/175								
	AG-DVX100(A)(AE)(AP)(B)(BE)(BP)								
	AG-HVX200(E)(MC)(P), AG-HVX202EN								
	VDR-D310								Direct mount
	VDR-D400								RA3743(Included)
	VDR-D300/D250					RA5237A			Direct mount
	SDR-S100/S200								Direct mount*3
	NV-GS320								Direct mount
	NV-GS500/400					RA5243A			RA3743(Included)*3
	NV-GS300					RA5237A			Direct mount
	NV-GS250					RA5243A			RA3743(Included)*3
VDR-M30K									
NV-GS55/GS50									
JVC	GZ-HM400								
	GZ-HD620							Direct mount	
	GZ-HD300/HD320							RA37305P5(Included)	
	GZ-HD40/HD30								
	GZ-HD5/HD6								
	GZ-HD3/HD7					RA5246			
	GZ-MG275/MG255							RA37305P5(Included)*5	
	GZ-MG575/MG555								
	GZ-MG505							Direct mount*3*4	
	GZ-MG77/MG67/MG70/MG50/MG40							RA37305P5(Included)	
	GZ-MG47							RA37305P5(Included)	
	GR-D650							RA37305P5(Included)	
	GR-D350							RA3727P5(Included)	
	GR-D250							RA3727P5(Included)	
	GZ-MC500					RA5237A		Direct mount	
	GZ-MC200/MC100							RA37305P5(Included)	
	GR-DV3000/DV3500					Direct mount			
	GR-DV5000					Direct mount			
	GR-DV900K/DV700K					Direct mount			
GR-DV500					RA5237A				
GR-X5					RA5237A				
HITACHI	DZ-BD10H/10HA							RA3743(Included)*5	
	DZ-BD7(H)(HA)(HE), DZ-BD70(A)(E)							RA3743(Included)*5	
	DZ-GX3300							Direct mount	
	DZ-GX3200							RA3734P5(Included)*3	
DZ-GX3100							RA37305P5(Included)		
TOSHIBA	GSC-R60/R30/MEHV10							RA37305P5(Included)	

\*1:Vignetting occurs at 4:3 Still mode \*2:Vignetting occurs at Still/Video/under scanning mode \*3:Remove camera's cosmetic ring or hood before attaching the Raynox lens \*4:Vignetting occurs at Still/16:9 Video mode when used with QC-303 \*5:Vignetting occurs at Still mode \*6:Slight vignetting occurs at under scanning/still mode \*7:Unable to take a full diagonal fisheye image \*8:Unable to take circular fisheye image other than at 4:3 Still mode \*9:may not produce either circular or diagonal fish-eye image \*10:Slight vignetting may occur in (under scanning) mode and still image mode in maximum wideangle zooming. \*11:A Circular Fisheye image can be captured at still mode in under-scanning system(PC monitor).

Remote control function and internal video light/Flash may not work properly with conversion lens attached.